

OWNER MANUAL STUNT SCOOTER


MODEL – 13947



Manufactured to EN 14619 Class A.
Suitable user age 6+ with maximum user weights 100KG

INSTRUCTIONS:

1. Remove scooter from carton. Check all attached parts:
- Allen Key, T type handle bar, and Deck with headset

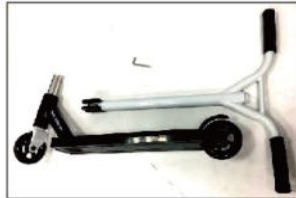

2. A) Insert T-bar to the head set
B) Make sure the front screws and wheel are aligned in the central position.



3. Tighten 4 screws with Allen Key.



*NOTE:

- Please ensure all components are tightly in place by properly tightening to the 4 screws.
- Always tighten 4 screws simultaneously to ensure an even and level fit.

WARNING

- This scooter is equipped with a rear foot-operated brake. It is designed for a single rider.
- Do not use on public highways. It is not intended for off-road use, racing, or use with any motorized device.
- Take special care when riding on wet pavement.
- The scooter should be used on a flat, dry, clean road surface and where possible away from other road users.
- Adult supervision is recommended for children.
- The following protective equipment should be worn when using this scooter: hand / wrist, knee, head and elbow protection and Helmet



- Never ride at night. Obey all traffic and pedestrian regulations, give right of way to pedestrians.
- When self-locking nuts and other self-locking fixings are loosened, their effectiveness may be lessened considerably.
- If you want to stop, press your foot firmly on the brake pedal (fender) directly. When your speed is fast, it may be impossible to stop immediately.
- Traction and braking will be considerably diminished when this scooter is ridden on a wet or loose surface. We do not recommend riding on wet or loose surfaces.
- Be careful and avoid emergency conditions.
- Replace the wheels and bearings if you find the wheels are worn or not turning smoothly. Use an Allen key wrench when replacement is needed. If wheels and bearing damage are discovered, please discontinue use.
- Footwear must always be worn when using this product.
- When riding the scooter, the two front wheels must face forward.
- Check all clamping devices for tightness and foot brake prior to riding.
- The mechanism to reduce speed will get hot from continuous use so do not touch after braking.
- Do not modify this product other than to manufacturer's instructions.
- Adult assembly only.
- Read the information supplied by the manufacturer before use.
- Retain these instructions for future reference.
- This scooter is not designed for stunts or use on skate ramps.

LIMITED WARRANTY

This warranty does not cover damage or loss due to accident, normal wear, improper assembly, inadequate adjustment, jumping, stunt riding, racing, competition, abuse, neglect, or when used with any kind of motorized device.

Produced by: San K C International Ltd. 4f, No.142, Sec.2, Chan-an E, Rd, Taipei 10456, Taiwan

Imported by: Hiks Products Ltd, 1 Nelson Street, Southend on sea, Essex, SS1 1EG, United Kingdom