

<b>Adapter-Typ</b>	<b>Modellbezeichnung</b>
<b>1x 3,5mm Nokia „groß“ (N1)</b>	Mobiltelefon: 1100, 1101, 1110, 1600, 2300, 2600, 2650, 2652, 3100, 3120, 3220, 3230, 3300, 3660, 5100, 5240, 5140i, 6020, 6021, 6030, 6060, 6100, 6170, 6230, 6230i, 6260, 6310i, 6600, 6610i, 6670, 6680, 6681, 6810, 6820, 6822, 7260, 7270, 7280, 7380, 7610, 7710, 8800, 9210i, 9300, 9300i, 9500, E60, E70
<b>1x 2,0mm Nokia „klein“ (N2)</b>	Mobiltelefon: 3250, 5500, 6070, 6080, 6101, 6102, 6103, 6111, 6125, 6131, 6136, 6151, 6155, 6233, 6234, 6270, 6280, 6288, 7360, 7370, 7373, 7390, E50, E61, N70, N71, N72, N73, N80, N81, N90, N91, N92, N93, 5800i x plus, 8800 Sirocco
<b>1x K750 Sony Ericsson (E2)</b>	Mobiltelefon: D750i, J100i, J230i, K310i, K610i, K610iM, K750i, K800i, M600i, P990i, V630i, W300i, W600i, W710i, W800i, W810i, W880i, W900i, W950i, Z310i, Z520i, Z530i, Z550i, Z610i
<b>1x PSP PlayStation Portable</b>	Spielkonsole: PSP
<b>1x NDS Nintendo DS Lite</b>	Spielkonsole: NDS Lite
<b>1x D600 Samsung (S1)</b>	Mobiltelefon: A288, D410, D415, D418, E315, E316, E317, R225, R225M, N625, V20X, S30X, 3500, 6100, 8500, P107, P207, X497, D307, D357, D508, D608, N105, Q105, V205, V206, N625, S307, X427M, P107, C207
<b>1x G600 Samsung (S2)</b>	Mobiltelefon: A737, B2100, B3410, C3050C, E1088C, E1100, E1100C, E1150C, P270, S3030C, S5230, S5233, W599, W629, F619, F669, S3650, B528, W8300, M800, U900, W699, E2510
<b>1x D800 Samsung (S3)</b>	Mobiltelefon: D528, D800, D808, D820, D828, D838, D848, D908, E908, E208, E570, E848, i760, i520, i718, j600, P300, T809, U608, U708, X820, X828
<b>1x Mini USB</b>	Alcatel: OT-E801, OT-S853 HTC: Hero, Magic, Mteor, P3300, P3350, P3400, P3470, P3600, P4350, P6300, P6500, S310, S620, S710, S730, S740, Snap, Tattoo, Touch, Touch 3G, Touch Cruise, Touch Diamond, Touch Diamond 2, Touch Dual, Touch HD, Touch Pro, Touch Pro 2, Touch Viva, Touch 2, Ty TN, Ty TN II Motorola: A668, A732, A780, A910, C290, E1070, E310, E770v, I290, I335, I425, IC502, KRZR K1, SLVR L2, SLVR L6, SLVR L7, MPx200, RIZR Z3, ROKR E2, PEBL U6, 6510, 7510, 7520, V191, V195, V235, V360, V1075, V3, V3iV, V3x Vodafone: Vodafone.V1415, Vodafone.V1605, Vodafone.V1615, Vodafone.V1640 RIM-BlackBerry: 7100, 7130, 7290, 8100pearl, 8110pearl, 8120pearl, 8130pearl, 8300curve, 8310curve, 8320curve, 8700, 8700g, 8800, 8820, 8900, 9000bold
<b>1x Micro USB</b>	Acer: beTouch E120, beTouch E130, Stream Google: Nexus One HTC: Nexus One, HTC HD2, HTC Desire, HTC Legend, HTC HD mini, HTC Wildfire LG: BL20 Chocolate, BL40 Chocolate, GM750 Nokia: 6500 Classic, 7900 Crystal, Prism, N85, N97, E52, E55, 8600 Luna, 8800 Carbon Arte, 3120 Classic, 3710 Fold, 3720 Classic, 5030 Xpress Radio, 5130 Xpress Music, 5330 TV Edition Samsung: C5510, G810, I8510, INNOV8, S8000, M2310, M2510, M6700, M7500, M7600, M8910, Pixon12, S6700, S7350, S7350 Ultra Slide, S8000 Jet, Samsung Galaxy S II, Samsung Galaxy S III Sony Ericsson: ELM J1012, Vivaz U5i, Hazel Xperia X10 T-Mobile: myTouch 3G Slide, Vairy Text, Vairy Touch II, Pulse, Pulse Mini RIM-BlackBerry: 9500 Storm, 9700 Bold, 9520 Storm, 9530 Storm, 8900 Javelin Curve, 8220 Kick Start, 9630 Tour
<b>1x KU990 LG (L1)</b>	Mobiltelefon: KG70, KG77, KG90, KG90C, KG220, KG800, KU250, KU380, KU580, KU970, KU990, KE770, KE850, KE970, KS10, KW820, VX8500, VX8600