

EASYmaxx

Fächer- Wäscheständer 1800

19146

DE Hinweise zum Gebrauch

Sehr geehrte Kundin, sehr geehrter Kunde,
wir freuen uns, dass Sie sich für unseren **EASYmaxx Fächer-
Wäscheständer 1800** entschieden haben. Sollten Sie Fragen
zum Produkt haben, kontaktieren Sie den Kundenservice über
unsere Website: www.ds-group.de/kundenservice

Lieferumfang

- Wäscheständer (1 x)
- Hinweise zum Gebrauch (1 x)

Den Lieferumfang auf Vollständigkeit und Transportschäden
überprüfen. Bei Schäden nicht verwenden, sondern den Kunden-
service kontaktieren.

Bestimmungsgemäßer Gebrauch

- Das Produkt ist zum Aufhängen von Wäsche (max. 20 kg) in
Innen- und Außenräumen vorgesehen.
- Das Produkt ist für den privaten Gebrauch, nicht für eine
gewerbliche Nutzung konzipiert. Das Produkt nur wie in den
Hinweisen zum Gebrauch beschrieben nutzen. Jede weitere
Verwendung gilt als bestimmungswidrig.

Symbole



Gefahrenzeichen: Dieses Symbol zeigt mögliche Gefahren
an. Die dazugehörigen Sicherheitshinweise aufmerksam
lesen und befolgen.



Hinweise zum Gebrauch vor Benutzung lesen.




Wichtige Hinweise

- Verpackungsmaterial von Kindern und Tieren fernhalten.
Es besteht Erstickungsgefahr!
- Das Produkt ist **kein** Spielzeug! Darauf achten, dass Kinder
sich nicht an das Produkt hängen oder darauf klettern.
- Das Produkt immer auf einem ebenen, festen Untergrund auf-
stellen und sicherstellen, dass es korrekt zusammengebaut ist.
- Das Produkt nicht benutzen, wenn es beschädigt ist.
- Das Produkt schützen vor Feuer, Minustemperaturen, lang
anhaltender, direkter Sonneneinstrahlung, Nässe und Stößen.
- Keine Veränderungen am Produkt vornehmen. Nicht ver-
suchen, es eigenständig zu reparieren oder Teile zu ersetzen.
In Schadensfällen den Kundenservice kontaktieren.
- Das zusammengeklappte Produkt immer aufrecht transportieren,
um ungewolltes Herausrutschen der Trockenstäbe zu vermeiden.

Benutzung




Ausklappen

- **Beine:**
 1. Die Arretierung am Sockel drücken und gedrückt halten
(Bild A). Gleichzeitig die Säule anheben und die Standbeine
aus der Säule ziehen (Bild B).
 2. Die Standbeine nach außen klappen und einrasten (Bild C).
- **Stäbe:** Jeden Stab bis zum Anschlag senkrecht nach oben
aus der Säule ziehen (Bild D: 1.), dann den Stab nach außen
klappen (Bild D: 2.). Bei Bedarf können auch nur einzelne
Stäbe ausgeklappt werden.

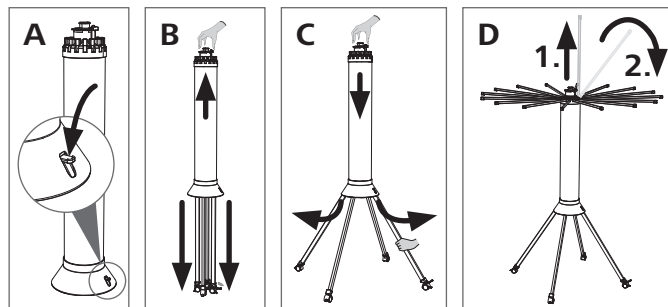

Zusammenklappen

- **Stäbe:** Jeden Stab nach oben klappen (Bild E: 1.), dann
senkrecht in die Säule schieben (Bild E: 2.).
- **Beine:**
 1. Die Säule leicht anheben, gleichzeitig die Stäbe zur Mitte
klappen (Bild F).
 2. Die Säule bis zum Boden absenken, um die Beine in der
Säule zu verstauen (Bild G).

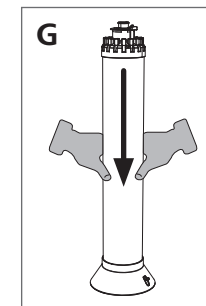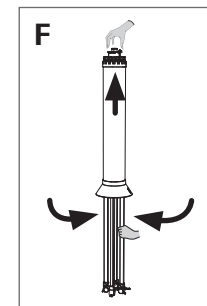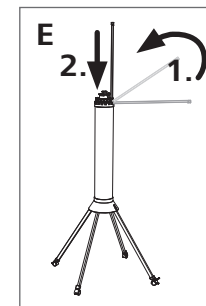

Reinigung und Aufbewahrung

- **Beachten:** Keine ätzenden oder scheuernden Reinigungs-
mittel verwenden. Diese können die Oberfläche beschädigen.
- Bei Bedarf mit einem feuchten Tuch abwischen.
- Das Produkt vollständig trocknen lassen, bevor es zusammen-
geklappt wird.
- Das Produkt an einem sauberen, trockenen, für Kinder und
Tiere unzugänglichen Ort aufbewahren.

Entsorgung



Das Verpackungsmaterial umweltgerecht entsorgen und
der Wertstoffsammlung zuführen.

**Die Abfallvermeidung leistet einen noch wertvolleren
Beitrag zum Umweltschutz. Sofern möglich, ist daher
neben einer weiteren eigenen Nutzung oder Reparatur
auch die Abgabe an Zweitnutzer eine ökologisch wertvolle
Alternative zur Entsorgung.**

Produktdaten

Artikelnummer:	19146
Maße (ØxH):	ca. 20x80 cm (zusammengeklappt) max. 112x125 cm (ausgeklappt)
Tragfähigkeit:	ca. 20 kg
ID Hinweise zum Gebrauch:	Z 19146 M DS V1 0725 as

DS Produkte GmbH

Stormarnring 14, 22145 Stapelfeld, Deutschland

Kundenservice:

Am Heisterbusch 1, 19258 Gallin, Deutschland

☎ +49 38851 314650*

kundenservice@dspro.de

*Anruf in das deutsche Festnetz zum Tarif Ihres Anbieters.

Alle Rechte vorbehalten.

EASYmaxx

Fan-shaped Clothes Rack 1800

19146

EN Instructions for Use

Dear Customer,

We are delighted that you have chosen our **EASYmaxx fan-shaped clothes rack 1800**. If you have any questions about the product, contact the customer service department via our website: www.ds-group.de/kundenservice

Items Supplied

- Clothes rack (1 x)
- Instructions for use (1 x)

Check the items supplied for completeness and transport damage. If you find any damage, do not use the product but contact our customer service department.

Intended Use

- The product is intended to be used to hang up laundry (max. 20 kg) either indoors or outdoors.
- The product is designed for personal use only and is not intended for commercial applications. The product should only be used as described in the Instructions for use. Any other use is deemed to be improper.

Symbols



Danger symbols: This symbol indicates possible hazards. Read the associated safety notices carefully and follow them.



Read the instructions before use.




Important Notices

- Keep the packaging material away from children and animals. There is a danger of suffocation!
- The product is **not** a toy! Make sure that children do not hang onto the product or climb up on it.
- Always set up the product on a flat, solid surface and make sure that it is assembled correctly.
- Do not use the product if it is damaged.
- Protect the product from fire, sub-zero temperatures, prolonged direct sunlight, wet conditions and impacts.
- Do not make any modifications to the product. Do not try to repair it yourself or to replace any individual parts. In the event of any damage, contact the customer service department.
- Always transport the folded product upright to prevent the drying rods from accidentally slipping out.

Use




Unfolding

1. **Legs:**
 - Press and hold the lock on the base (**Picture A**). At the same time, lift the column and pull the legs out of the column (**Picture B**).
 - Fold the legs outwards and click into place (**Picture C**).
2. **Rods:** Pull each rod vertically upwards out of the column until it stops (**Picture D: 1.**), then fold the rod outward (**Picture D: 2.**). If necessary, only individual rods can be unfolded.

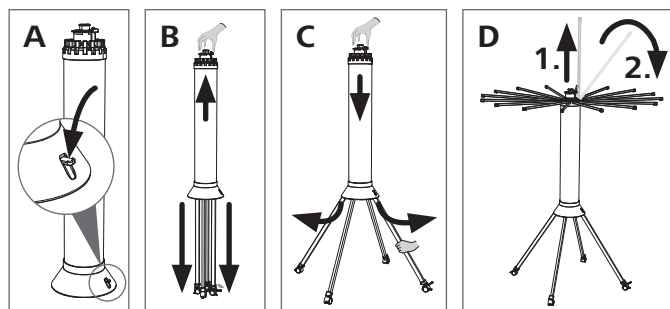

Collapsing

1. **Rods:** Fold each rod upwards (**Picture E: 1.**), then push it vertically into the column (**Picture E: 2.**).
2. **Legs:**
 - Lift the column slightly and at the same time fold the rods towards the middle (**Picture F**).
 - Lower the column to the floor to store the legs in the column (**Picture G**).

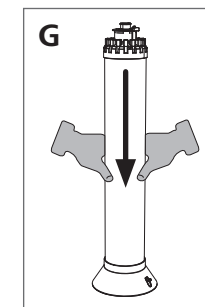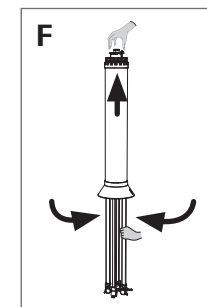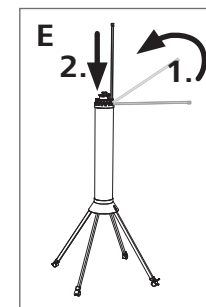

Cleaning and Storage

- **Note:** Do not use any caustic or abrasive cleaning agents. These may damage the surface.
- If necessary, wipe down with a slightly damp cloth.
- Allow the product to dry completely before collapsing it.
- Store the product in a clean, dry place out of the reach of children or animals.

Product Data

Article number:	19146
Dimensions (ØxH):	20 x 80 cm (collapsed) max. 112 x 125 cm (folded out)
Load capacity:	approx. 20 kg
ID of Instructions for use:	Z 19146 M DS V1 0725 as

Disposal



Dispose of the packaging material in an environmentally friendly manner so that it can be recycled.

Waste prevention makes an even more valuable contribution to protecting the environment. This means if possible, as well as continuing to use or repair a product yourself, passing it on to another user also represents an ecologically beneficial alternative to disposal.

DS Produkte GmbH

Stormarnring 14, 22145 Stapelfeld, Germany

Customer Service:

Am Heisterbusch 1, 19258 Gallin, Germany

+49 38851 314650*

kundenservice@dspro.de

*Calls to German landlines are subject to your provider's charges.

All rights reserved.