


Montageanleitung

Wand-WC, spülrandlos „Tassoni Bowl“

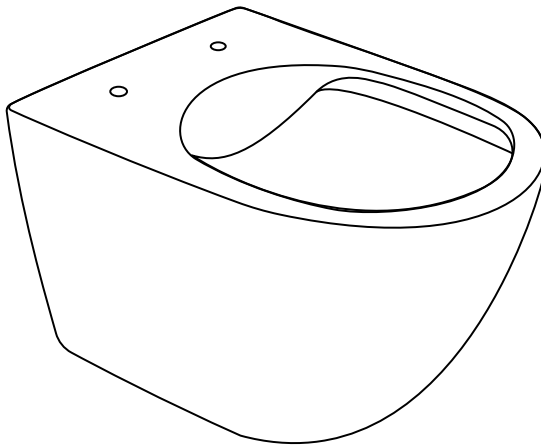


- ⒹⒺ Montageanleitung
- ⒸⒶ Návod pro montáž
- ⒹⒶ Monteringsanvisning
- ⒺⒶ Instrucciones de montaje
- ⒻⒶ Instructions de montage
- ⒼⒶ Installation instructions
- ⒽⒶ Uputstvo za montažu
- ⒽⒶ Szerelési útmutatás
- ⒾⒶ Istruzioni di montaggio

- ⒶⒶ Montagehandleiding
- ⒶⒶ Instrukcja montażu
- ⒶⒶ Instrucțiuni de montaj
- ⒶⒶ Руководство По Монтажу
- ⒶⒶ Monteringsanvisning
- ⒶⒶ Navodila za montažo
- ⒶⒶ Návod na montáž
- ⒶⒶ Montaj kılavuzu


FJS-BAD-WWC-92210_0522

[https://web.fjschuette.de/qrcode/
92210_Montageanleitung.pdf](https://web.fjschuette.de/qrcode/92210_Montageanleitung.pdf)



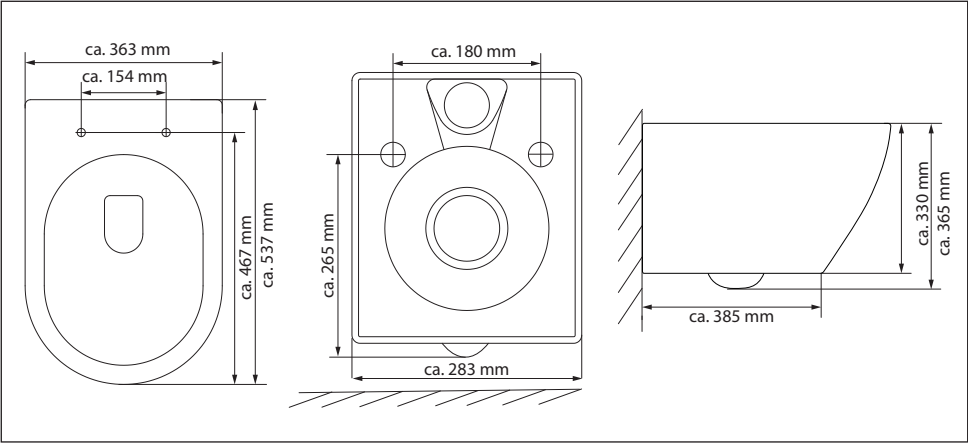

	1 1x		
	2 2x	3 3.1 2x	
not incl. ! Warning symbol Ø 45 mm Ø 110 mm	4 1x	5 2x	
6 6 mm 1x			



Ø 45 mm

x1



Ø 110 mm

x1

